 
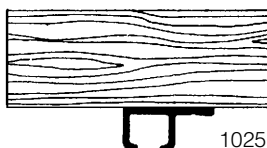 


Silent Gliss®

1021 & 1025 Hand Operated Curtain Tracks Fitting Instructions


1021 is intended for face fixing to timber. 1025 is for top fix to timber.

Both profiles are pre-drilled at 30cm centres and should be fixed with wood screws through each of the holes. Use a chalk line or similar method to ensure that the track is squarely aligned.

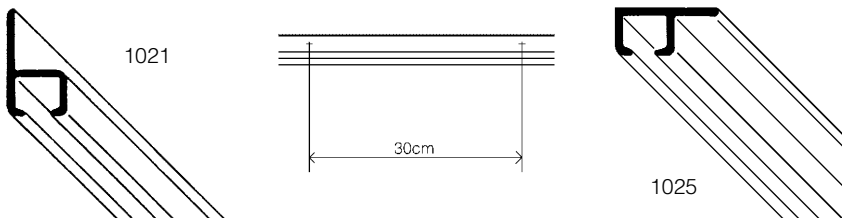

Track 1021 should be fitted with its lower edge level with the bottom of the batten where possible.

If future access to track ends for either 1021 or 1025 is difficult or impossible, then the profile can be slotted at one end using the 7030 slotting tool. This allows for easy removal or addition of extra gliders if so required at a later date. The slot is stopped using the 3032 spring endstop.

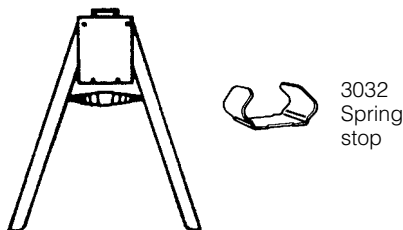

Silent Gliss Limited

Star Lane, Margate, Kent CT9 4EF, England
Telephone: 01843 863571 Fax: 01843 864503
E-mail: info@silentgliss.co.uk www.silentgliss.co.uk



1021/1025