 

 
Silent Gliss®

1280 Hand Operated Curtain Track Fitting Instructions



Brackets should be spaced evenly at no more than every 600mm (24") intervals.

 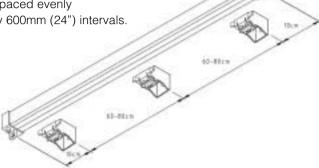





Firmly screw **3630** brackets to wall or ceiling. The two outside brackets should be located 10cm (4") in from the ends of track so as not to coincide with end covers. Remaining brackets should be equally spaced along track approx. every 600mm (24").



Screw for wall or ceiling with universal bracket.




 To fit the track, simply push on as shown.



To remove track push forwards and outwards.

 Standard Accessories






3630 Wall/Ceiling Bracket



3985Eyelet
Endcover/
Endstop

P.T.O. These instructions are continued on reverse side.




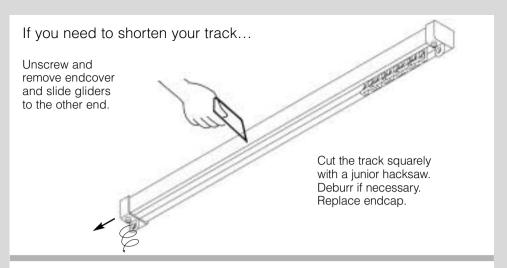

Optional/Accessories (not supplied)


A wide range of accessories is available for this most versatile curtain track. ask your dealer.

 Fixed extension brackets.




	Α	В	С
3134	50	51.5	-
3135	50	71.5	21.5
3136	50	91.5	41.5
3137	80	111.5	61.5
3138	80	141.5	91.5
3139	80	191.5	141.5
(Dimensions in mm)			

 Adjustable extension brackets.



 Up to 3 tracks can be located on the same extension bracket or a pelmet formed around your existing track.



Endstop/ Intermediate stop



3947 Pair of magnetic

aliders

Sprina

Stop

3660

Bracket

Wall/Ceiling







Combination straight overlap complete with 'S' hook attachment 3949. (For use with pair curtains and 3936A above on opposite curtain. Use with draw rod.)

4092 Plastic

draw rod 4092S Aluminium draw rod

THIS TRACK CANNOT BE BENT AT HOME.

Silent Gliss Limited

Star Lane, Margate, Kent CT9 4EF, England Telephone: 01843 863571 Fax: 01843 864503 E-mail: info@silentgliss.co.uk www.silentgliss.co.uk

