

Fitting Instructions

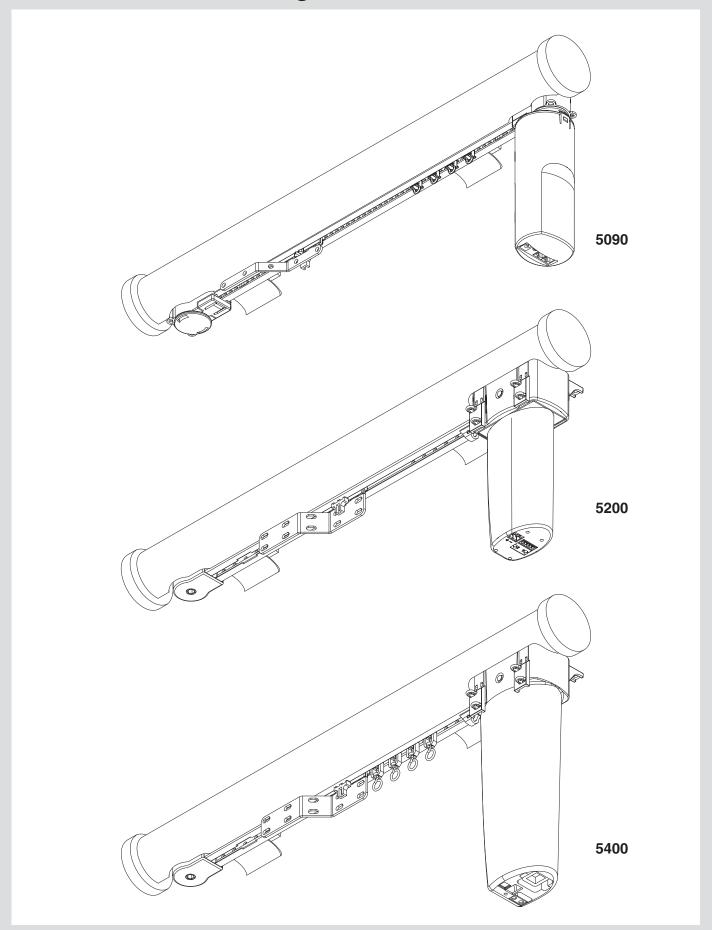




Fitting Instructions

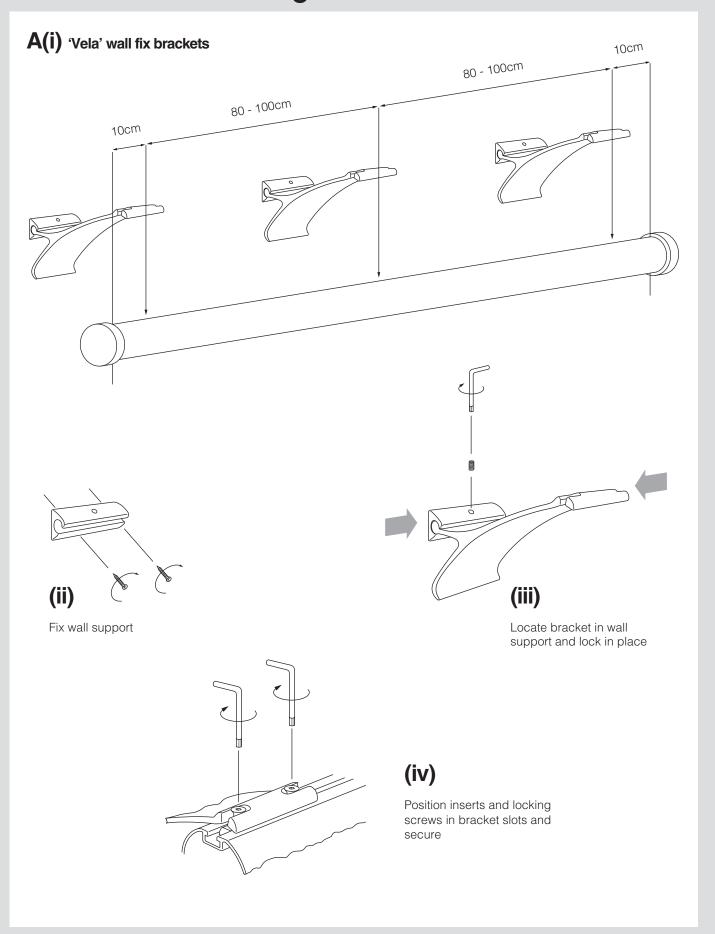



Fitting Instructions

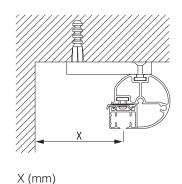

B 6138P2 Ceiling fix brackets option i (standard endcap)

Ceiling fix bracket and insert are loose in top channel of track. Ascertain where you want the brackets to be fixed by offering the track up to the ceiling. (Again the outside fixing points should be 7cm/2³/₄" from the outside edge of the track and max. 60cm/2'0" apart.) Tighten bracket and insert until they do not move, in the positions required. Offer track up to the ceiling and mark through the other hole in the bracket. Drill and plug the ceiling and fix firmly.

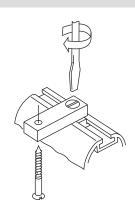

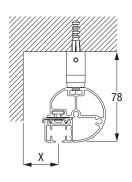


X (mm) 80-100

80-100


B 6175 Ceiling fix option ii for use with finials


Ceiling fix bracket and insert are loose in top channel of track. Ascertain where you want the brackets to be fixed by offering the track up to the ceiling. (Again the outside fixing points should be 7cm/2³/₄" from the outside edge of the track and max. 60cm/2'0" apart.) Tighten bracket and insert until they do not move, in the positions required. Offer track up to the ceiling and mark through the other hole in the bracket. Drill and plug the ceiling and fix firmly.

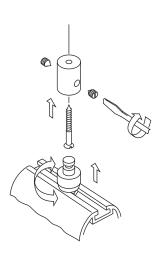

Fitting the motor unit to the predetermined end of the track

5090

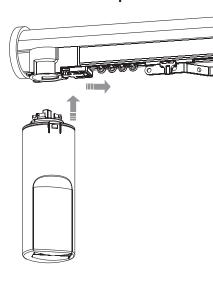


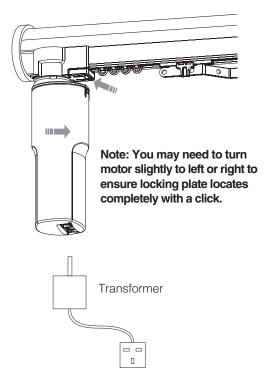


Refer to relevant motor manual supplied


Fitting Instructions


5200

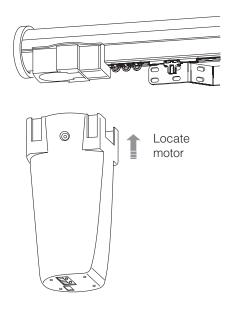

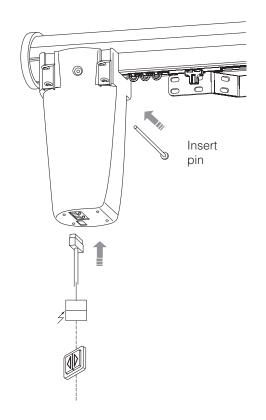

5400

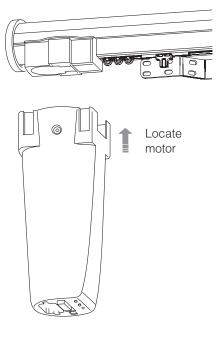

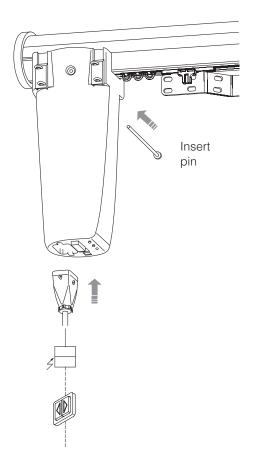

Refer to relevant motor manual supplied

0910